



SMC™ Flex Specifications

Bulletin Number 150

Topic	Page
Product Overview	2
Standards Compliance and Certifications	2
Features	3
Catalog Number Explanation	4
General Specifications	6
Approximate Dimensions	11

Additional Resources

These documents contain additional information concerning related products from Rockwell Automation.

Resource	Description
Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1	Provides general guidelines for installing a Rockwell Automation industrial system.
Product Certifications website, http://www.ab.com	Provides declarations of conformity, certificates, and other certification details.

You can view or download publications at <http://www.rockwellautomation.com/literature/>. To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.

LISTEN.
THINK.
SOLVE.®

	
Features	SMC™ Flex 200...690V 1...1250 A
Soft Start	S
Kickstart	S
Current Limit	S
Dual Ramp Start	S
Full Voltage	S
Soft Stop	S
Pump Control	O
Preset Slow Speed	S
Linear Acceleration/Deceleration	S
SMB™ Smart Motor Braking	O
Accu-Stop™	O
Slow Speed with Braking	O
Integrated Bypass Contactor	S
Integrated Motor Overload Protection	S
DPI Communication	S
Metering	S
Motor Winding Heater Function	‡
Diagnostic Faults and Alarms	S
Parameter Configuration/Programming	S
Human Interface Module (HIM)	O
Configuration Software: Drives Explorer and Drives Executive	O
Network Communications	O
Inside Delta Connection	S
Standards Compliance: CE Marked per Low Voltage Directive 73/23/EEC, 93/68/EEC CSA Certified (File No. LR 1234) UL Listed (File No. E96956)	S

S = Standard Feature

O = Optional Feature

‡ Option using a Bulletin 1410 motor winding heater.

Standards Compliance

UL 508

CSA C22.2 No.14

EN/IEC 60947-1

EN/IEC 60947-4-2

Modes of Operation

The SMC Flex controller provides the following modes of operation as standard:

- Soft Start
- Selectable Kickstart
- Current Limit Start
- Dual Ramp Start
- Full Voltage Start
- Linear Speed Acceleration
- Preset Slow Speed
- Soft Stop

Certifications

cULus Listed (Open Type) (File No. E96956, Guides NMFT, NMFT7)

CSA Certified (File No. LR 1234)

CE Marked

CCC Certified

Optional Modes of Operation

Pump Control

- Start and Stop

Braking Control

- SMB — Smart Motor Braking
- Accu-Stop
- Slow Speed with Braking

Note: For detailed information about the different modes of operation, see page 4.

Description of Features

Electronic Motor Overload Protection

The SMC Flex controller incorporates, as standard, electronic motor overload protection. This overload protection is accomplished electronically with an I^2t algorithm.

When coordinated with the proper short-circuit protection, overload protection is intended to protect the motor, motor controller, and power wiring against overheating caused by excessive overcurrent. The SMC Flex controller meets applicable requirements as a motor overload protective device.

The controller's overload protection is programmable, providing the user with flexibility. The overload trip class consists of either OFF, 10, 15, 20, or 30 protection. The trip current is programmed by entering the motor full-load current rating, service factor, and selecting the trip class.

Thermal memory is included to accurately model motor operating temperature. Ambient temperature insensitivity is inherent in the electronic design of the overload.

Stall Protection and Jam Detection

Motors can experience locked-rotor currents and develop high torque levels in the event of a stall or a jam. These conditions can result in winding insulation breakdown or mechanical damage to the connected load. The SMC Flex controller provides both stall protection and jam detection for enhanced motor and system protection. Stall protection allows the user to program a maximum stall protection delay time from 0...10 seconds. The stall protection delay time is in addition to the programmed start time and begins only after the start time has timed out. If the controller senses that the motor is stalled, it will shut down after the delay period has expired. Jam detection allows the user to determine the motor jam detection level as a percentage of the motor's full-load current rating. To prevent nuisance tripping, a jam detection delay time, from 0.0...99.0 seconds, can be programmed. This allows the user to select the time delay required before the SMC Flex controller will trip on a motor jam condition. The motor current must remain above the jam detection level during the delay time. Jam detection is active only after the motor has reached full speed.

Underload Protection

Utilizing the underload protection of the SMC Flex controller, motor operation can be halted if a drop in current is sensed.

The SMC Flex controller provides an adjustable underload trip setting from 0...99% of the programmed motor full-load current rating with an adjustable trip delay time of 0...99 seconds.

Undervoltage Protection

The SMC Flex controller's undervoltage protection will halt motor operation if a drop in the incoming line voltage is detected.

The undervoltage trip level is adjustable as a percentage of the programmed line voltage, from 0...99%. To eliminate nuisance trips, a programmable undervoltage trip delay time of 0...99 seconds can also be programmed. The line voltage must remain below the undervoltage trip level during the programmed delay time.

Oversupply Protection

If a rise in the incoming line voltage is detected, the SMC Flex controller's oversupply protection will halt motor operation.

The oversupply trip level is adjustable as a percentage of the programmed line voltage, from 0...199%. To eliminate nuisance trips, a programmable oversupply trip delay time of 0...99 seconds can also be programmed. The line voltage must remain above the oversupply trip level during the programmed delay time.

Voltage Unbalance Protection

Voltage unbalance is detected by monitoring the 3-phase supply voltage magnitudes in conjunction with the rotational relationship of the three phases. The controller will halt motor operation when the calculated voltage unbalance reaches the user-programmed trip level.

The voltage unbalance trip level is programmable from 0...25% unbalance.

Excessive Starts Per Hour

The SMC Flex controller allows the user to program the allowed number of starts per hour (up to 99). This helps eliminate motor stress caused by repeated starting during a short time period.

Metering

Power monitoring parameters include:

- 3-phase current
- 3-phase voltage
- Power in kW or MW
- Power usage in kWh or MWh
- Power Factor
- Motor thermal capacity usage
- Elapsed time

Note: The motor thermal capacity usage allows the user to monitor the amount of overload thermal capacity usage before the SMC Flex controller's built-in electronic overload trips.

Built-in DPI Communication Capabilities

A serial interface port is provided as standard, which allows connection to a Bulletin 20 Human Interface Module and a variety of Bulletin 20-COMM Communication Modules. This includes Allen-Bradley Remote I/O, DeviceNet, ControlNet, Ethernet, Profibus, Interbus, and RS485-DF1.

LCD Display

The SMC Flex controller's three-line 16-character backlit LCD display provides parameter identification using clear, informative text. Controller set up can be performed quickly and easily without the use of a reference manual. Parameters are arranged in an organized four-level menu structure for ease of programming and fast access to parameters.

Keypad Programming

Programming of parameters is accomplished through a five-button keypad on the front of the SMC Flex controller. The five buttons include up and down arrows, an Enter button, a Select button, and an Escape button. The user needs only to enter the correct sequence of keystrokes for programming the SMC Flex controller.

Auxiliary Contacts

Four fully programmable hard contacts are furnished as standard with the SMC Flex controller:

- Aux #1, Aux #2, Aux #3, Aux #4
- N.O./N.C.
- Normal/Up-to-Speed/External Bypass/Fault/Alarm/Network

Network I/O

The SMC Flex can have up to two inputs and four outputs controlled via a communication network. The output contacts use the auxiliary contacts.

Ground Fault Input

The SMC Flex can monitor for ground fault conditions. An external core balance current transformer is required for this function. See SMC Flex User Manual for additional information.

Tach Input

A motor tachometer is required for the Linear Speed Start mode. Please see the Specifications section on page 22 for tachometer characteristics.

PTC Input

A motor PTC input can be monitored by the SMC Flex. In the event of a fault, the SMC Flex will shut down and indicate a motor PTC fault.

Open and Non-Combination

150 - F135 F B D B - 8L

a

Bulletin Number	
Code	Description
150	Solid-State Controller
150B	Enclosed Solid-State Controller with Isolation Contactor

b

Controller Ratings	
Code	Description
F5	5 A, 3 Hp @ 460V AC
F25	25 A, 15 Hp @ 460V AC
F43	43 A, 30 Hp @ 460V AC
F60	60 A, 40 Hp @ 460V AC
F85	85 A, 60 Hp @ 460V AC
F108	108 A, 75 Hp @ 460V AC
F135	135 A, 100 Hp @ 460V AC
F201	201 A, 150 Hp @ 460V AC
F251	251 A, 200 Hp @ 460V AC
F317	317 A, 250 Hp @ 460V AC
F361	361 A, 300 Hp @ 460V AC
F480	480 A, 400 Hp @ 460V AC
F625	625 A, 500 Hp @ 460V AC
F780	780 A, 600 Hp @ 460V AC
F970	970 A, 800 Hp @ 460V AC
F1250	1250 A, 1000 Hp @ 460V AC

c

Enclosure Type	
Code	Description
F	NEMA Type 4/12 (IP65) (Non-Combination Only)
J	NEMA Type 12 (IP54)
N	Open

d

Input Line Voltage	
Open Type	
Code	Description
B	200...460V AC, 3-phase, 50 and 60 Hz
C	200...575V AC, 3-phase, 50 and 60 Hz
Z	230...690V AC, 3-phase, 50 and 60 Hz (Open Only, 108 A and above)
Non-Combination Enclosed Only	
H	200...208V AC, 3-phase, 50 and 60 Hz
A	230V AC, 3-phase, 50 and 60 Hz
B	400...460V AC, 3-phase, 50 and 60 Hz
C	500...575V AC, 3-phase, 50 and 60 Hz

e

Control Voltage	
Code	Description
D	100...240V AC (5...480 A units)
R	24V AC/DC (5...480 A units) (Open Only)
E	110/120V AC (625...1250 A units)
A	230/240V AC (625...1250 A units)

f

Options (Select Only One)	
Code	Description
Blank	Standard
B	Pump Control
D	Braking Control

g

Options (Non-Combination only) (see page 19 for a full listing)	
Code	Description
8L	Line-Mounted Protective Module (enclosed only)
8M	Load-Mounted Protective Module (enclosed only)
8B	Line- and Load-Mounted Protective Modules (enclosed only)
Load-side MOVs are not available with Pump and Braking options, or on delta-connected motors. MOVs can be field installed for open type units.	

Combination

152H - F480 **F** **BD** **B** - **59** - **8B**

a

Bulletin Number	
Code	Description
152H	Solid-State Controller with Fusible Disconnect
152B	Solid-State Controller with Fusible Disconnect and Isolation Contactor
153H	Solid-State Controller with Circuit Breaker
153B	Solid-State Controller with Circuit Breaker and Isolation Contactor

b

Controller Ratings	
Code	Description
F5	5 A, 3 Hp @ 460V AC
F25	25 A, 15 Hp @ 460V AC
F43	43 A, 30 Hp @ 460V AC
F60	60 A, 40 Hp @ 460V AC
F85	85 A, 60 Hp @ 460V AC
F108	108 A, 75 Hp @ 460V AC
F135	135 A, 100 Hp @ 460V AC
F201	201 A, 150 Hp @ 460V AC
F251	251 A, 200 Hp @ 460V AC
F317	317 A, 250 Hp @ 460V AC
F361	361 A, 300 Hp @ 460V AC
F480	480 A, 400 Hp @ 460V AC
F625	625 A, 500 Hp @ 460V AC
F780	780 A, 600 Hp @ 460V AC

c

Enclosure Type	
Code	Description
F	NEMA Type 4/12 (IP65)
J	NEMA Type 12 (IP54)

c

Options (see page 19 for a full listing)	
Code	Description
8L	Line-Mounted Protective Module
8M	Load-Mounted Protective Module
8B	Line- and Load-Mounted Protective Modules
Load-side MOVs are not available with Pump and Braking options, or when used with inside-the-delta connections.	

d

Line Voltage, 120V AC Control Voltage	
Code	Description
HD	200...208V AC, 3-phase, 50 and 60 Hz
AD	230V AC, 3-phase, 50 and 60 Hz
BD	400...460V AC, 3-phase, 50 and 60 Hz
CD	500...575V AC, 3-phase, 50 and 60 Hz

e

Control Options	
Code	Description
Blank	Standard
B	Pump Control
D	Braking Control


f

Horsepower									
Cat. No.	Hp Rating	Cat. No.	Hp Rating	Cat. No.	Hp Rating	Cat. No.	Hp Rating	Cat. No.	Hp Rating
33	0.5	39	5	46	40	52	150	60	450
34	0.75	40	7.5	47	50	54	200	61	500
35	1	41	10	48	60	56	250	62	600
36	1.5	42	15	49	75	57	300	63	700
37	2	43	20	50	100	58	350	65	800
38	3	44	25	51	125	59	400	67	1000
—	—	45	30	—	—	—	—	—	—

Specifications

Functional Design Specifications			
Standard Features	Installation	Power Wiring Control Wiring	Standard squirrel-cage induction motor or a Wye-Delta, six-lead motor. 2- and 3-wire control for a wide variety of applications.
	Setup	Keypad Software	Front keypad and backlit LCD display. Parameter values can be downloaded to the SMC-Flex Controller with DriveTools programming software and the Cat. No. 20-COMM... DPI communication module.
	Communications		One DPI provided for connection to optional human interface and communication modules.
	Starting and Stopping Modes		Soft Start Current Limit Start Dual Ramp Full Voltage Linear Speed Acceleration Preset Slow Speed Soft Stop
	Protection and Diagnostics		Power loss, line fault, voltage unbalance, excessive starts/hour, phase reversal, undervoltage, overvoltage, controller temp, stall, jam, open gate, overload, underload, communication fault.
	Metering		Amps, volts, kW, kWh, MW, MWh, elapsed time, power factor, motor thermal capacity usage.
	Alarm Contact		Overload, underload, undervoltage, overvoltage, unbalance, jam, stall, and ground fault
	Status Indication		Stopped, starting, stopping, at speed, alarm, and fault.
	Auxiliary Contacts		Four fully programmable contacts as normal/up-to-speed/fault/alarm/network (N.O./N.C.), or external bypass (N.O. only).
Optional Features	Pump Control		Helps reduce fluid surges in centrifugal pumping systems during starting and stopping period. Starting time is adjustable from 0...30 s. Stopping time is adjustable from 0...120 s.
	SMB Smart Motor Braking		Provides motor braking without additional equipment for applications that require the motor to stop quickly. Braking current is adjustable from 0...400% of the motor's full-load current rating.
	Braking Control	Accu-Stop	Provides controlled position stopping. During stopping, braking torque is applied to the motor until it reaches preset slow speed (7% or 15% of rated speed) and holds the motor at this speed until a stop command is given. Braking torque is then applied until the motor reaches zero speed. Braking current is programmable from 0...450% of full-load current.
	Slow Speed with Braking		Used on applications that require slow speed (in the forward direction) for positioning or alignment and also require braking control to stop.

Wiring Diagram — Line Controller

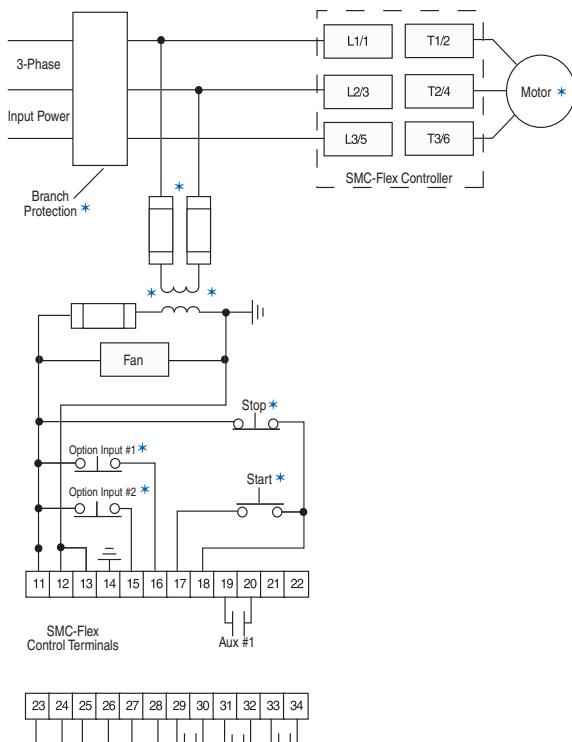

* Customer supplied.

Electrical Ratings				
		Device Rating	UL/CSA/NEMA	IEC
Power Circuit	Rated Operation Voltage	480V	200...480V AC (-15%, +10%)	200...415V
		600V	200...600V AC (-15%, +10%)	200...500V
		690V	230...600V AC (-15%, +10%)	230...690V/Y (-15%, +10%)
	Rated Insulation Voltage	480V	N/A	500V
		600V		500V
		690V		690V
	Rated Impulse Voltage	480V	N/A	6000V
		600V		
		690V		
	Dielectric Withstand	480V	2200V AC	2500V
		600V		
		690V		
	Repetitive Peak Inverse Voltage Rating	480V	1400V	1400V
		600V	1600V	1600V
		690V	1800V	1800V
	Operating Frequency	All	50/60 Hz	
	Utilization Category	5...480 A	MG 1	AC-53B:3.0-50:1750
		625...1250 A	MG 1	AC-53B:3.0-50:3550
	Protection Against Electrical Shock	5...85 A	N/A	IP20 *
		108...480 A		IP2X (with terminal covers)‡
		625...1250 A		IP00 (open device)
	DV/DT Protection	480V & 600V	RC Snubber Network	
		690V	None	
	Transient Protection	480V & 600V	Metal Oxide Varistors: 220 Joules	
		690V	None	
		5...480 A	100...240V AC or 24V AC/DC	
Control Circuit	Rated Operational Voltage*	625...1250 A	110/120V AC and 230/240V AC	
		Rated Insulation Voltage	All	N/A
	Rated Impulse Voltage	All	N/A	240V
	Dielectric Withstand	All	1600V AC	3000V
	Operating Frequency	All	50/60 Hz	
	Input onstate voltage minimum		85V AC, 19.2V DC / 20.4V AC	
	Input onstate current		20 mA @120V AC / 40 mA @ 240V AC, 7.6 mA @ 24V AC/DC	
	Input offstate voltage maximum		50V AC, 10V DC / 12V AC	
Input offstate current @ input offstate voltage		<10 mA AC, <3 mA DC		

* 690V power is only available with 100...240V control.

* IP20 when largest wire size is used. Rating is possible with smaller size wire by using an insulated ferrule or lug, which reduces the largest size wire to the size used in the application.

† IP2X when largest wire size is used with Cat. No. 150-TC terminal covers. When other wire sizes are used, Cat. No. 150-TC terminal covers provide dead front protection only.

		Electrical Ratings					
SCPD Performance 200...600V		Type 1 ⁺ [△]					
SCCR List★		Max. Standard Available Fault	Max. Standard Fuse [A] [‡]	Max. Standard Available Fault	Max. Circuit Breaker [A]	Max. High Fault	Max. Fuse [A] [§]
Short-Circuit Protection	Line Device Operational Current Rating [A]	5	5 kA	20	5 kA	20	70 kA
		25	5 kA	100	5 kA	100	70 kA
		43	10 kA	150	10 kA	150	70 kA
		60	10 kA	225	10 kA	225	70 kA
		85	10 kA	300	10 kA	300	70 kA
		108	10 kA	400	10 kA	300	70 kA
		135	10 kA	500	10 kA	400	70 kA
		201	18 kA	600	18 kA	600	70 kA
		251	18 kA	700	18 kA	700	70 kA
		317	30 kA	800	30 kA	800	69 kA
		361	30 kA	1000	30 kA	1000	69 kA
		480	42 kA	1200	42 kA	1200	69 kA
		625	42 kA	1600	42 kA	1600	74 kA
		780	42 kA	1600	42 kA	2000	74 kA
		970	85 kA	2500	85 kA	2500	85 kA
		1250	85 kA	3000	85 kA	3200	85 kA
		8.7	5 kA	35	5 kA	35	70 kA
		43	5 kA	150	5 kA	150	70 kA
		74	10 kA	300	10 kA	300	70 kA
		104	10 kA	400	10 kA	400	70 kA
		147	10 kA	400	10 kA	400	70 kA
		187	10 kA	600	10 kA	500	70 kA
		234	10 kA	700	10 kA	700	70 kA
		348	18 kA	1000	18 kA	1000	70 kA
		435	18 kA	1200	18 kA	1200	70 kA
		549	30 kA	1600	30 kA	1600	69 kA
		625	30 kA	1600	30 kA	1600	69 kA
		831	42 kA	1600	30 kA	1600	69 kA
		850	42 kA	1600	42 kA	2000	74 kA
		900	42 kA	1600	42 kA	2000	74 kA
		1200	85 kA	3000	85 kA	3200	85 kA
		1600	85 kA	3000	85 kA	3200	85 kA
SCPD Performance 690V		Type 1 ⁺					
SCCR List★	Device Rating	Max. Standard Available Fault	Max. Ampere Tested — North American Style		Max. Ampere Tested — European Style		
Maximum FLC	108	70 kA	A070URD33xxx500		6,9 gRB 73xxx400 6,6URD33xxx500		
	135	70 kA	A070URD33xxx500		6,9 gRB 73xxx400 6,6URD33xxx500		
	201	70 kA	A070URD33xxx700		6,9 gRB 73xxx630 6,6URD33xxx700		
	251	70 kA	A070URD33xxx700		6,9 gRB 73xxx630 6,6URD33xxx700		
	317	70 kA	A070URD33xxx900		6,9 gRB 73xxx800 6,6URD33xxx900		
	361	70 kA	A070URD33xxx900		6,9 gRB 73xxx800 6,6URD33xxx900		
	480	70 kA	A070D33xxx1250 A100URD73xxx1250		9 URD 73xxx1250 6,6URD33xxx1250		
	625	70 kA	A070URD33xxx1400		6,6URD33xxx1400		
	780	70 kA	A070URD33xxx1400		6,6URD33xxx1400		
	970	85 kA	Two fuses in parallel A070URD33xxx1250		Two fuses in parallel 6,6URD33xxx1250		
	1250	85 kA	Two fuses in parallel A070URD33xxx1250		Two fuses in parallel 6,6URD33xxx1250		

★ Consult local codes for proper sizing of short circuit protection.

‡ Non-time delay fuses (K5 — 5...480V (8.7...831 A) devices; Class L — 625...1250V (850...1600 A) devices).

§ High capacity fault rating when used with time delay class CC, J, or L fuses.

⊕ Type 1 performance/protection indicates that, under a short-circuit condition, the fused or circuit breaker-protected starter shall cause no danger to persons or installation but may not be suitable for further service without repair or replacement.

△ For short-circuit current rating (SCCR) for enclosed panel with external bypass or isolation contactor, see the Industrial Controls catalog website: www.ab.com/catalogs.

Electrical Ratings					
Power Requirements	Control Module	1...480 A	120...240V AC	Transformer	75 VA
			24V AC	Transformer	130 VA
				Inrush Current	5 A
				Inrush Time	250 ms
			24V DC	Transient Watts	60 W
	Heatsink Fan(s)△	625...1250 A		Transient Time	500 ms
				Steady State Watts	24 W
				Minimum Allen-Bradley Power Supply	1606-XLP50E
			751 VA (recommended 800 VA)		
			5...135 A, 20 VA		
Steady State Heat Dissipation with Control and Fan Power (Watts)	Controller Rating [A]	201...251 A, 40 VA			
		317...361 A, 60 VA			
		480 A, 150 VA			
		5	70		
		25	70		
		43	81		
		60	97		
		85	129		
		108	91		
		135	104		
		201	180		
		251	198		
		317	225		
		361	245		
Auxiliary Contacts 19/20 (Aux #1) 29/30 (Aux #2) 31/32 (Aux #3) 33/34 (Aux #4)	Controller Rating [A]	480	290		
		625	446		
		780	590		
		970	812		
		1250	1222		
PTC Input Ratings	Type of Control Circuit		Electromagnetic relay		
	Number of Contacts		1		
	Type of Contacts		programmable N.O./N.C.		
	Type of Current		AC		
	Rated Operational Current		3 A @ 120V AC, 1.5 A @ 240V AC		
	Conventional Thermal Current/ I_{th} AC/DC		5 A		
	Make/Break VA		3600/360		
	Utilization Category		AC-15/DC		
	Response Resistance		3400 Ω ±150 Ω		
	Reset Resistance		1600 Ω ±100 Ω		
Tach Input	Short-Circuit Trip Resistance		25 Ω ±10 Ω		
	Max. Voltage at PTC Terminals ($R_{PTC} = 4 \text{ k}\Omega$)		< 7.5V		
	Max. Voltage at PTC Terminals ($R_{PTC} = \text{open}$)		30V		
	Max. No. of Sensors.		6		
	Max. Cold Resistance of PTC Sensor Chain		1500 Ω		
Response Time			800 ms		
Tach Input			0...5V DC, 4.5V DC = 100% Speed		

△ Heatsink fans can be powered by either 110/120V AC or 220/240V AC.

Environmental	
Operating Temperature Range	-5...+50 °C (23...+122 °F) (open) -5...+40 °C (23...+104 °F) (enclosed)
Storage and Transportation Temperature Range	-20...+75 °C (-4...167 °F)
Altitude	2000 m (6560 ft)
Humidity	5...95% (non-condensing)
Pollution Degree	2

Mechanical			
Resistance to Vibration	Operational	All	1.0 G Peak, 0.15 mm (0.006 in.) displacement
	Non-Operational	5...480 A	2.5 G Peak, 0.38 mm (0.015 in.) displacement
		625...1250 A	1.0 G Peak, 0.15 mm (0.006 in.) displacement
Resistance to Shock	Operational	5...85 A	15 G
		108...480 A	5.5 G
		625...1250 A	4 G
	Non-Operational	5...85 A	30 G
		108...480 A	25 G
		625...1250 A	12 G
Construction	Power Poles	5...85 A	Heatsink thyristor modular design
	Power Poles	108...1250 A	Heatsink hockey puck thyristor modular design
	Control Modules		Thermoset and Thermoplastic Moldings
	Metal Parts		Plated Brass, Copper, or Painted Steel
Terminals	Power Terminals	5...85 A	Cable size — Line Upper — 2.5...95 mm ² (14...3/0 AWG) Line Lower — 0.8...2.5 mm ² (18...14 AWG) Load Upper — 2.5...50 mm ² (14...1 AWG) Load Lower — 0.8...2.5 mm ² (18...14 AWG) Tightening torque — 14.7 N•m (130 lb.-in.) Wire strip length — 18...20 mm (0.22...0.34 in.)
		108...135 A	One M10 x 1.5 diameter hole per power pole
		201...251 A	Two M10 x 1.5 diameter holes per power pole
		317...480 A	Two M12 x 1.75 diameter holes per power pole
		625...1250 A	Two 13.5 mm (0.53 in.) diameter holes per power pole
	Power Terminal Markings		NEMA, CENELEC EN50 012
	Control Terminals	M3 screw clamp	Clamping yoke connection
	Other		
EMC Emission Levels	Conducted Radio Frequency Emissions Radiated Emissions		Class A Class A
EMC Immunity Levels	Electrostatic Discharge Radio Frequency Electromagnetic Field Fast Transient Surge Transient		8 kV Air Discharge Per EN/IEC 60947-4-2 Per EN/IEC 60947-4-2 Per EN/IEC 60947-4-2
Overload Characteristics	Current Range [A]	5	Line 1...5 1.7...9
		25	5...25 8.6...43 8.6...43
		43	8.6...43 14.8...75
		60	12...60 20.8...104
		85	17...85 29.4...147
		108	27...108 47...187
		135	34...135 59...234
		201	67...201 116...348
		251	84...251 145...435
		317	106...317 183...549
		361	120...361 208...625
		480	160...480 277...831
		625	208...625 283...850
		780	260...780 300...900
		970	323...970 400...1200
		1250	416...1250 533...1600
	Trip Classes Trip Current Rating Number of Poles		10, 15, 20, and 30 117% of Motor FLC 3
Certifications	Open-Type Controllers	CE Marked Per Low Voltage Directive 73/23/EEC, 93/68/EEC UL Listed (File No. E96956)	

Approximate Dimensions and Shipping Weights

Open Type Controllers

Dimensions are in millimeters (inches).

Dimensions are not intended for manufacturing purposes.

Rating [A]	Height	Width	Depth	Weight
5...85	321 (12.6)	150 (5.9)	203 (8.0)	5.7 kg (12.6 lbs)
108...135	443.7 (17.47)	196.4 (7.74)	205.2 (8.08)	15.0 kg (33 lbs)
201...251	560 (22.05)	225 (8.86)	253.8 (9.99)	30.4 kg (67 lbs)
317...480	600 (23.62)	290 (11.42)	276.5 (10.89)	45.8 kg (101 lbs)
625...780	1041.1 (41.0)	596.9 (23.5)	346.2 (13.63)	179 kg (395 lbs)
970...1250	1041.1 (41.0)	596.9 (23.5)	346.2 (13.63)	224 kg (495 lbs)

Enclosed-Type Line-Connected Controllers

Factory-installed options may affect enclosure size requirements.

Exact dimensions can be obtained after order entry. Please consult your local Rockwell Automation sales office or Allen-Bradley distributor.

Dimensions are in millimeters (inches). Dimensions are not intended for manufacturing purposes.

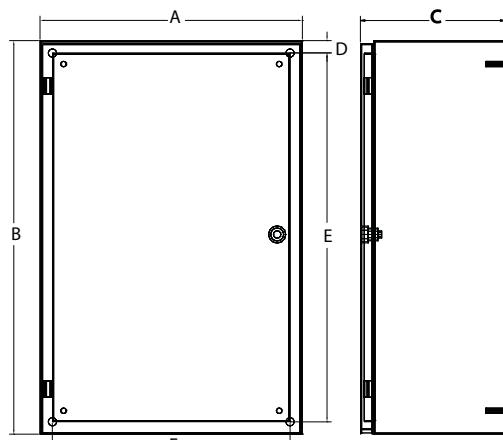


Figure 1 — Wall-Mount

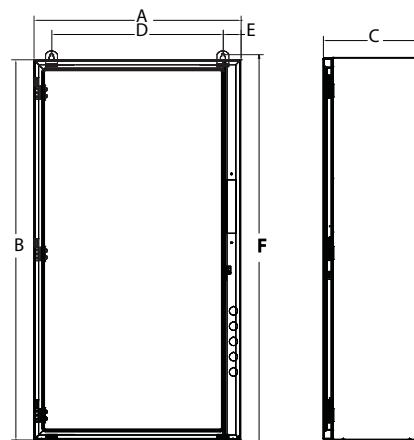


Figure 2 — Wall-Mount

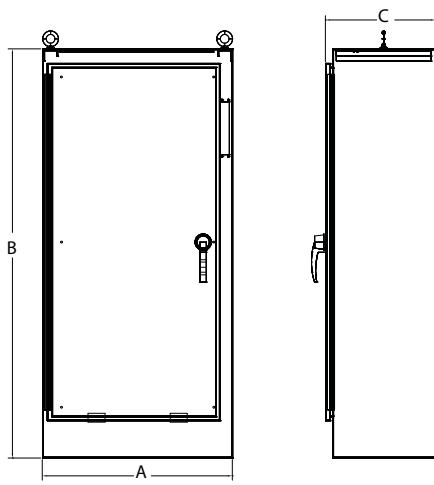


Figure 3 — Floor-Mount

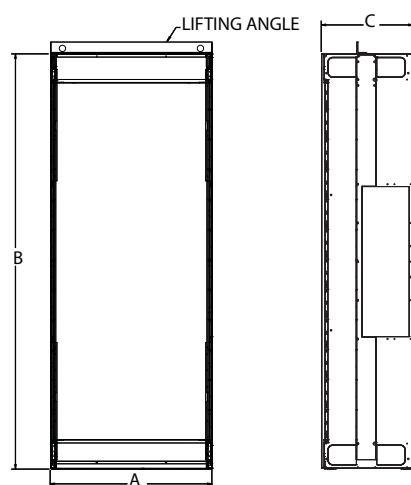


Figure 4 — Floor-Mount

Approximate Dimensions

Bulletin 150 SMC™ Flex Specifications

Controller Rating [A]	Bulletin	With Option	Dimension Figure No.	Dimensions in inches (mm)				
				A (Width)	B (Height)	C (Depth)	D (Mtg. Dim.)	E (Mtg. Dim.)
SMC-Flex Combination Controller								
5...25	152H,152B,153H,153B	—	1	16 (406)	24 (610)	10 (254)	0.75 (19)	22.5 (572)
		BP,NB,NI,6_		24 (610)	30 (762)	12 (305)		28.5 (724)
43	152H,152B,153H,153B	—	1	16 (406)	24 (610)	10 (254)	0.75 (19)	22.5 (572)
		BP, 6_		24 (610)	30 (762)	12 (305)		28.5 (724)
		NI, NB		30 (762)	38 (965)	14 (356)		36.5 (927)
60	153H,153B	—	1	16 (406)	24 (610)	10 (254)	0.75 (19)	22.5 (572)
	152H, 153H,153B	6_		24 (610)	30 (762)	12 (305)		28.5 (724)
	152H,152B	—		24 (610)	30 (762)	12 (305)		28.5 (724)
	152H,152B,153H,153B	NI, NB		30 (762)	38 (965)	14 (356)		36.5 (927)
85	153H,153B	—	1	16 (406)	24 (610)	10 (254)	0.75 (19)	22.5 (572)
	152H,152B	—		24 (610)	30 (762)	12 (305)		28.5 (724)
	152H,153H,153B	6_		24 (610)	30 (762)	12 (305)		28.5 (724)
	153H	BP		24 (610)	30 (762)	12 (305)		28.5 (724)
	152H,152B,153B	BP, 6_		30 (762)	38 (965)	14 (356)		36.5 (927)
108	152H,152B,153B	BP,NI	1	30 (762)	38 (965)	14 (356)	0.75 (19)	36.5 (927)
	152H,153H	—		30 (762)	38 (965)	14 (356)		36.5 (927)
	6_			30 (762)	38 (965)	14 (356)		36.5 (927)
	152H,152B,153H,153B	BP, NB,NI		36 (914)	51 (1295)	14 (356)		49.5 (1257)
135	152H,153H	—	1	30 (762)	38 (965)	14 (356)	0.75 (19)	36.5 (927)
	6_			30 (762)	38 (965)	14 (356)		36.5 (927)
	152H,152B,153H,153B	BP, NB,NI		36 (914)	51 (1295)	14 (356)		49.5 (1257)
201	152H,153H	—	1	30 (762)	38 (965)	14 (356)	0.75 (19)	36.5 (927)
	6_			30 (762)	38 (965)	14 (356)		36.5 (927)
	152H,152B,153H,153B	BP, NB,NI		36 (914)	51 (1295)	14 (356)		49.5 (1257)
251	152H,153H	—	1	30 (762)	38 (965)	14 (356)	0.75 (19)	36.5 (927)
	6_			30 (762)	38 (965)	14 (356)		36.5 (927)
317	152H,152B,153H,153B	BP, NB,NI	1	36 (914)	51 (1295)	14 (356)	0.75 (19)	49.5 (1257)
	—			36 (914)	51 (1295)	14 (356)		49.5 (1257)
361	153H	—	1	36 (914)	51 (1295)	14 (356)	0.75 (19)	49.5 (1257)
	6_			36 (914)	51 (1295)	14 (356)		49.5 (1257)
	BP			36 (914)	60 (1524)	14 (356)		58.5 (1486)
	153B	—		36 (914)	60 (1524)	14 (356)		58.5 (1486)
480	153H,152B	—	2	38 (965)	60 (1524)	17 (431)	33.88 (861)	1.75 (45)
	6_			38 (965)	60 (1524)	17 (431)		1.75 (45)
	152H,152B,153B	NB,NI		40 (1016)	84 (2134)	18 (457)		—
625	153H	—	1	36 (914)	51 (1295)	14 (356)	0.75 (19)	49.5 (1257)
	6_			36 (914)	51 (1295)	14 (356)		49.5 (1257)
	BP,NI	1‡		36 (914)	60 (1524)	14 (356)		58.5 (1486)
	—			38 (965)	60 (1524)	17 (431)		1.75 (45)
780	153H,153B	BP	2★§	38 (965)	60 (1524)	17 (431)	33.88 (861)	1.75 (45)
	BP			38 (965)	60 (1524)	17 (431)		1.75 (45)
	NB	3★§		40 (1016)	84 (2134)	18 (457)		—
	—	4★*		20 (508)	91.5 (2324)	20 (508)		—
780	153H,153B	BP,NB,NI	3★*	40 (1016)	84 (2134)	18 (457)	—	—
	152B	BP,NB,NI,6_	3★	40 (1016)	84 (2134)	18 (457)		—
	152H,152B	BP,NB,NI	4	35 (889)	91.5 (2324)	20 (508)		—
	152B	—	4	55 (1397)	91.5 (2324)	20 (508)		—
	152H,152B,153H,153B	NB		105 (2664)	91.5 (2324)	20 (508)		—
	152H	—		55 (1397)	91.5 (2324)	20 (508)		—
	153H,153B	—		70 (1778)	91.5 (2324)	20 (508)		—
780	152H,152B	—	4	65 (1651)	91.5 (2324)	20 (508)	—	—
	152H,152B	BP,NI		55 (1397)	91.5 (2324)	20 (508)		—
	152H,152B,153H,153B	NB		70 (1778)	91.5 (2324)	20 (508)		—
	153H,153B	—		105 (2664)	91.5 (2324)	20 (508)		—

* Assumed line voltage to be 480V AC. Different voltage may necessitate a bigger enclosure size. Consult your local Rockwell Automation sales office or Allen-Bradley distributor.

† 350 Hp max.

‡ 150 Hp @ 208V AC, 350 Hp @480V, 400...450 Hp @ 600V

§ 200 Hp @ 240V AC, 400 Hp @480V, 500 Hp @ 600V

Bulletin 150 SMC™ Flex Specifications

Approximate Dimensions

Controller Rating [A]	Bulletin	With Option	Dimension Figure No.	Dimensions in inches (mm)						
				A (Width)	B (Height)	C (Depth)	D (Mtg. Dim.)	E (Mtg. Dim.)	F (Mtg. Dim.)	
Non-Combination Controller										
5...43	150	—	1	16 (406)	24 (610)	10 (254)	0.75 (19)	22.5 (572)	14.5 (368)	
		6_	1★	16 (406)	24 (610)	10 (254)		22.5 (572)	14.5 (368)	
		BP	1	24 (610)	30 (762)	12 (305)		28.5 (724)	22.5 (572)	
	150, 150B	NB,NI	1	24 (610)	30 (762)	12 (305)		28.5 (724)	22.5 (572)	
	150	NB,6P_	1‡	30 (762)	38 (965)	14 (356)		36.5 (927)	28.5 (724)	
60	150	—	1	16 (406)	24 (610)	10 (254)	0.75 (19)	22.5 (572)	14.5 (368)	
	150B	—		24 (610)	30 (762)	12 (305)		28.5 (724)	22.5 (572)	
		BP		24 (610)	30 (762)	12 (305)		28.5 (724)	22.5 (572)	
	150	6_	1‡	24 (610)	30 (762)	12 (305)		28.5 (724)	22.5 (572)	
		NB	1	24 (610)	30 (762)	12 (305)		28.5 (724)	22.5 (572)	
	150, 150B	NI		30 (762)	38 (965)	14 (356)		36.5 (927)	28.5 (724)	
	85	150	1	16 (406)	24 (610)	10 (254)	0.75 (19)	22.5 (572)	14.5 (368)	
		150B		24 (610)	30 (762)	12 (305)		28.5 (724)	22.5 (572)	
				24 (610)	30 (762)	12 (305)		28.5 (724)	22.5 (572)	
		BP		24 (610)	30 (762)	12 (305)		28.5 (724)	22.5 (572)	
		150	6_	24 (610)	30 (762)	12 (305)		28.5 (724)	22.5 (572)	
			1‡	30 (762)	38 (965)	14 (356)		36.5 (927)	28.5 (724)	
108	150	—	1	24 (610)	30 (762)	12 (305)	0.75 (19)	28.5 (724)	22.5 (572)	
		BP		30 (762)	38 (965)	14 (356)		36.5 (927)	28.5 (724)	
		NB		30 (762)	38 (965)	14 (356)		36.5 (927)	28.5 (724)	
	150B	—		30 (762)	38 (965)	14 (356)		36.5 (927)	28.5 (724)	
		NB,NI		36 (914)	51 (1295)	14 (356)		49.5 (1257)	34.5 (876)	
135	150	—	1	24 (610)	30 (762)	12 (305)	0.75 (19)	28.5 (724)	22.5 (572)	
		BP		30 (762)	38 (965)	14 (356)		36.5 (927)	28.5 (724)	
	150B	—		30 (762)	38 (965)	14 (356)		36.5 (927)	28.5 (724)	
	150	NB		30 (762)	38 (965)	14 (356)		36.5 (927)	28.5 (724)	
	150B	NB,NI		36 (914)	51 (1295)	14 (356)		49.5 (1257)	34.5 (876)	
201	150	—	1	30 (762)	38 (965)	14 (356)	0.75 (19)	36.5 (927)	28.5 (724)	
	150,150B	NB,NI,BP;6_		36 (914)	51 (1295)	14 (356)		49.5 (1257)	34.5 (876)	
251	150	—	1	30 (762)	38 (965)	14 (356)	0.75 (19)	36.5 (927)	28.5 (724)	
	150,150B	NB,NI,BP;6_		36 (914)	51 (1295)	14 (356)		49.5 (1257)	34.5 (876)	
317	150	NB,NI,BP;6_	1	36 (914)	51 (1295)	14 (356)	0.75 (19)	49.5 (1257)	34.5 (876)	
	150B	NB,NI,BP;6_		36 (914)	60 (1524)	14 (356)		58.5 (1486)	34.5 (876)	
361	150	NB,NI,BP;6_	1	36 (914)	51 (1295)	14 (356)	0.75 (19)	49.5 (1257)	34.5 (876)	
	150B	NB,NI,BP;6_		36 (914)	60 (1524)	14 (356)		58.5 (1486)	34.5 (876)	
480	150	—	1	36 (914)	51 (1295)	14 (356)	0.75 (19)	49.5 (1257)	34.5 (876)	
	150, 150B	BP,NB,NI		36 (914)	60 (1524)	14 (356)		58.5 (1486)	34.5 (876)	
625	150	—	4	35 (889)	91.5 (2324)	20 (508)	—	—	—	
		BP,NB		60 (1524)	91.5 (2324)	20 (508)				
	150B	—		60 (1524)	91.5 (2324)	20 (508)				
		NB		90 (2286)	91.5 (2324)	20 (508)				
780	150	—	4	35 (889)	91.5 (2324)	20 (508)	—	—	—	
		BP,NB		60 (1524)	91.5 (2324)	20 (508)				
	150B	—		60 (1524)	91.5 (2324)	20 (508)				
		NB		90 (2286)	91.5 (2324)	20 (508)				

★ Extra capacity transformer may require a larger enclosure; consult your local Rockwell Automation sales office or Allen-Bradley distributor.

‡ 1 kVA control transformers or larger extra capacity transformers may require a larger enclosure; consult your local Rockwell Automation sales office or Allen-Bradley distributor.

Important User Information

Read this document and the documents listed in the additional resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete this form, publication [RA-DU002](#), available at <http://www.rockwellautomation.com/literature/>.

Allen-Bradley, Rockwell Software, Rockwell Automation, and LISTEN. THINK. SOLVE are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846